 


8BitDo[®]

Instruction Manual

使用说明






Arcade Controller 01

街机控制器 07

Arcade Controller

   English

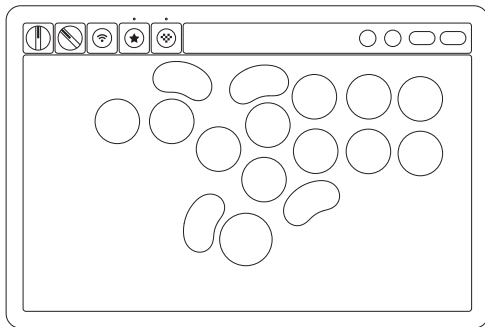

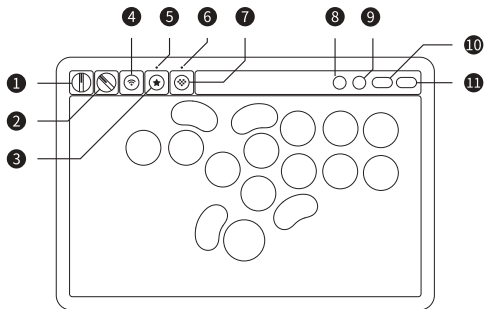

-
- | | | |
|----------------------------|-----------------|--|
| ① — Mode switch | ⑥ — Status LED | ⑪ — START |
| ② — Tournament lock switch | ⑦ — Home button | ⑫ — 2.4G adapter / Adapter compartment |
| ③ — Star button | ⑧ — L3 button | ⑬ — Power LED |
| ④ — Pair button | ⑨ — R3 button | |
| ⑤ — Mapping LED | ⑩ — SELECT | |

Windows

- System requirement: Windows 10 (1903) or above.

Wireless Connection

1. Turn the **Mode switch** to **X** position.
2. Connect the adapter to the USB port of your Windows device.
3. After the connection is complete, the **Status LEDs** on both the Arcade Controller and the adapter will remain solid.

Wired Connection

1. Turn the **Mode switch** to **X** position.
 2. Connect the Arcade Controller to your Windows device via the USB cable, wait until the Arcade Controller is successfully recognized by the Windows device.
-

Switch

- System requirement: 3.0.0 or above.

Bluetooth Connection

1. Turn the **Mode switch** to **S** position.
2. Press and hold the **Pair button** for 3 seconds to enter the pairing mode, the **Status LED** will blink rapidly. (This is required for the very first time only)
3. Go to your Switch Home Page to click on **“Controllers”**, then click on **“Change Grip/Order”**, the **Status LED** will remain solid to indicate a successful connection.

Wired Connection

- Please ensure the “**Pro Controller Wired Communication**” is enabled in the system setting.
 1. Turn the **Mode switch** to **S** position.
 2. Connect the Arcade Controller to your Switch console via the USB cable, wait till the Arcade Controller is successfully recognized by the device.
-

 
Tournament Lock Switch

- Turn the **Tournament lock switch** to **Lock** position, **Pair button**, **Star button**, **Home button**, **L3 button**, **R3 button**, **SELECT button**, and **START button** will be disabled, to prevent unintentional inputs from impacting game.



P1/P2/P3/P4 Buttons Configuration

- Single button on the Arcade Controller can be mapped to the P1/P2/P3/P4 buttons, multiple button configurations are not supported.
- **SELECT button**, **START button**, and **Home button**, are not supported for the button configuration.



Battery

Status

Low battery



Battery charging



Fully charged



Power LED

Red LED blinks

Red LED remains solid

Red LED turns off

- Built-in 1000mAh battery pack, 20 hours of usage time via Bluetooth connection and wireless 2.4G connection, rechargeable with 3 hours charging time.
 - The Arcade Controller will automatically shut down if it fails to connect within 1 minute of startup, or if there are no operations within 15 minutes after establishing a connection.
 - The Arcade Controller will not shut down during wired connection.
-

Re-pair the Adapter

If the Arcade Controller is disconnected from the adapter or the adapter is replaced, you can re-pair it by following these steps:

1. Turn the **Mode switch** to **X** position.
2. Turn the **Tournament lock switch** to **Unlock** position.
3. Press and hold the **Pair button** for 3 seconds to enter the pairing mode, the **Status LED** will blink rapidly.
4. Connect the adapter to the USB port of your Windows device, wait for the Arcade Controller to automatically pair and connect with the adapter.
5. After the connection is complete, the **Status LEDs** on both the Arcade Controller and the adapter will remain solid.

Safety Warnings

 
- Please always use batteries, chargers, and accessories provided by the manufacturer.
- The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approved accessories.
- Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in serious injury.
- Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these actions can be dangerous.
- Any unauthorized changes or modifications to the device will void the manufacturer's warranty.
- This product contains small parts that may cause choking. Not suitable for children under three years old.
- This product features flashing lights. Individuals with epilepsy or photosensitivity should disable the lighting effects before use.
- Cables may cause tripping or entanglement hazards. Keep them away from walkways, children, and pets.
- Stop using this product immediately and seek medical attention if you experience dizziness, visual disturbances, or muscle spasms.

 
Ultimate Software

Please visit app.8bitdo.com to download the **Ultimate Software V2** to get the customize button mapping function & additional support.

Support

Please visit support.8bitdo.com for further information & additional support.

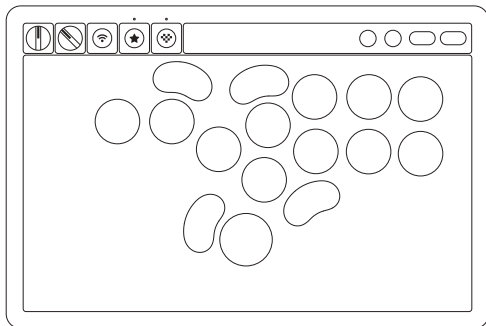

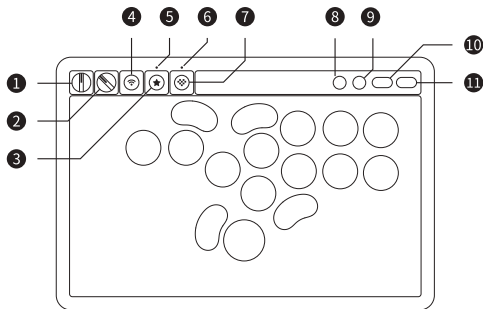

- ① — 模式开关
- ② — 赛事锁定开关
- ③ — 星号键
- ④ — 配对键
- ⑤ — 热键指示灯

- ⑥ — 状态指示灯
- ⑦ — Home 键
- ⑧ — L3
- ⑨ — R3
- ⑩ — SELECT

- ⑪ — START
- ⑫ — 接收器 / 接收器仓
- ⑬ — 电源指示灯

Windows

* 要求 Windows 设备系统版本为 Windows 10 (1903) 或更高版本。

无线连接

1. 将 **模式开关** 移动到 **X** 位置。
2. 将接收器连接到 Windows 设备的 USB 端口。
3. 连接完成后, 街机控制器与接收器 **状态指示灯** 均常亮。

有线连接

1. 将 **模式开关** 移动到 **X** 位置。
 2. 使用 USB 线将街机控制器连接到 Windows 设备的 USB 端口, 等待系统识别完成后即可使用。
-

Switch

* 要求 Switch 主机系统版本为 3.0.0 或更高版本。

蓝牙连接

1. 将 **模式开关** 移动到 **S** 位置。
2. 按住 **配对键** 约 3 秒至 **状态指示灯** 快速闪烁, 进入配对状态。(仅首次连接时需要配对)
3. 打开 Switch 主机“**手柄**”选项, 选择“**更改握法 / 顺序**”, 等待手柄连接, 连接完成后 **状态指示灯** 常亮。

有线连接

* 请确保“设置”-“手柄与感应器”-“Pro 手柄的有线连接”功能已开启。

1. 将 **模式开关** 移动到 **S** 位置。
2. 使用 USB 线将街机控制器连接到 Switch 主机的 USB 端口,等待系统识别完成后即可使用。

赛事锁定开关

* 将 **赛事锁定开关** 移动到 **锁定** 位置可禁止使用 **配对键**、**星号键**、**Home 键**、**L3 键**、**R3 键**、**SELECT 键**、**START 键**,以防误操作影响赛事。



配置 P1 / P2 / P3 / P4 键

- * 可将街机控制器上的单个按键复制到 P1 / P2 / P3 / P4 键,不支持配置多个按键。
- * **SELECT 键**、**START 键**、**Home 键** 不支持配置。



电源

电源状态

电量不足



正在充电



充电完成



电源指示灯状态

红灯闪烁

红灯常亮

红灯熄灭

- * 配备 1000 mAh 可充电式锂电池, 蓝牙连接可持续使用约 20 小时, 2.4G 连接可持续使用约 20 小时, 充电时间约 3 小时。
- * 开机后 1 分钟内未连接, 或连接后 15 分钟内无操作会自动关机。
- * 使用有线连接时不会自动关机。

重新配对接收器

若连接丢失或更换接收器, 可使用以下方法重新配对接收器:

1. 将 **模式开关** 移动到 **X** 位置。
2. 将 **赛事锁定开关** 移动到 **解锁** 位置。
3. 按住 **配对键** 约 3 秒至 **状态指示灯** 快速闪烁, 进入配对状态。
4. 将接收器连接到 Windows 设备的 USB 端口, 等待街机控制器与接收器自动配对连接。
5. 连接完成后, 街机控制器与接收器 **状态指示灯** 均常亮。

安全警示

- * 请使用制造商的电池、充电器、配件。
- * 在用户使用第三方的配件时,制造商不能对用户的安全负责。
- * 请勿自行拆卸、改装或修理设备。
- * 请勿挤压、拆解、刺穿或尝试改装设备及电池。
- * 对设备的任意变动或改装,将导致制造商对设备不予保修。
- * 产品包含小部件,可能造成窒息危险,不适合3岁以下儿童使用。
- * 本产品使用时包含闪烁灯光效果,若有癫痫病史或光敏性反应者使用时请关闭灯光。
- * 产品线缆可能造成绊倒或缠绕危险,请勿放置在行走区域,并远离儿童及宠物。
- * 如产品使用过程中出现头晕、视力异常、肌肉抽搐等症状,请立即停止使用并就医。

自定义配置

请访问 app.8bitdo.cn 获取 **精英软件 V2**,可配置按键映射等功能。

技术支持

请访问 support.8bitdo.cn 了解详细信息。



Manual



使用说明

