

8BitDo[®]

Instruction Manual

使用说明



Pro 3 Bluetooth Gamepad

 
01

 
Pro 3 蓝牙手柄

08

Pro 3 Bluetooth Gamepad

English

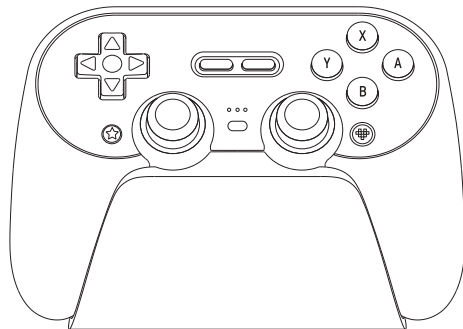

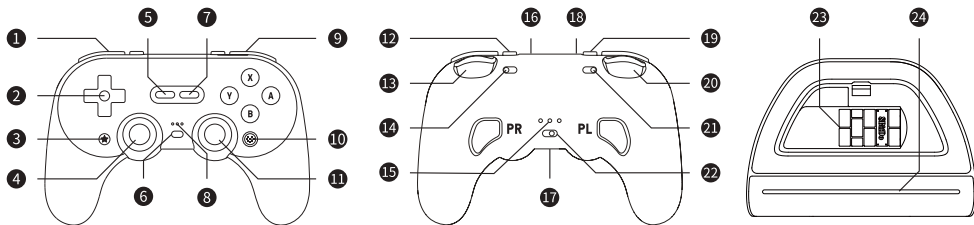

- Press the **start button** to turn on the gamepad.
- Hold the **start button** for 3 seconds to turn off the gamepad.
- Hold the **start button** for 8 seconds to forced shutdown the gamepad.

① — L1 button	⑩ — Home button	⑲ — L4 button
② — D-pad	⑪ — R3 button	⑳ — L2 button
③ — Star button	⑫ — R4 button	㉑ — Trigger mode switch
④ — L3 button	⑬ — R2 button	㉒ — Mode switch
⑤ — - select button	⑭ — Trigger mode switch	㉓ — 2.4G Adapter/Adapter compartment
⑥ — Profile button	⑮ — Charging contacts	㉔ — Charging status LED
⑦ — + start button	⑯ — Power LED	
⑧ — Profile LED	⑰ — Status LED	
⑨ — R1 button	⑱ — Pair button	

Windows

- Windows 10(1903) or above is required.

Wireless Connection

1. Turn the **Mode switch** to **S/X** position.
2. Press the **start button** to turn on the gamepad.
3. Connect the 2.4G adapter to the USB port of your Windows device, the **Status LED** will remain solid to indicate a successful connection.

Wired Connection

1. Turn the **Mode switch** to **S/X** position.
 2. Connect the gamepad to your Windows device via a USB cable and wait till the gamepad is successfully recognized by the device.
-

Switch

- Switch system 3.0.0 or above is required.
- NFC scanning, IR camera, HD rumble and notification LED are not supported.

Bluetooth Connection

1. Turn the **Mode switch** to **S** position.
2. Press the **start button** to turn on the gamepad.
3. Hold the **Pair button** for 3 seconds to enter its pairing mode, the **Status LED** will start to roll side to side. (This is required for the very first time only)
4. Go to your Switch Home Page to click on [Controllers], then click on [Change Grip/Order], the **Status LED** will remain solid to indicate a successful connection.

Wireless Connection

- Please ensure the [Pro Controller Wired Communication] is enabled.
1. Turn the **Mode switch** to **S/X** position.
 2. Press the **start button** to turn on the gamepad.
 3. Connect the 2.4G adapter to your Switch device's USB port, the **Status LED** will remain solid to indicate a successful connection.

Wired Connection

- Please ensure the [Pro Controller Wired Communication] is enabled.
1. Turn the **Mode switch** to **S** position.
 2. Connect the gamepad to your Switch device via a USB cable and wait till the gamepad is successfully recognized by the device.

Android

- Android 9.0 or above is required.

Bluetooth Connection

1. Turn the **Mode switch** to **D** position.
2. Press the **start button** to turn on the gamepad.
3. Hold the **Pair button** for 3 seconds to enter its pairing mode, the **Status LED** will start to roll side to side. (This is required for the very first time only)
4. Go to your Android device's [Bluetooth Setting] and turn it on, pair with **[8BitDo Pro 3]**, the **Status LED** will remain solid to indicate a successful connection.

Wired Connection

- OTG support is required on your Android device, please contact your manufacturer for more information.
1. Turn the **Mode switch** to **D** position.
 2. Connect the gamepad to your Android device via a USB cable and wait till the gamepad is successfully recognized by the device.

 
Turbo Function

- **D-pad, Home button, L3/L4 buttons, L4/R4 buttons, and PL/PR buttons** are not supported for turbo.
- The turbo settings will not be saved permanently and will revert to default settings after the gamepad is powered off or disconnected.



L4/R4/PL/PR Buttons Configuration


- Single or multiple buttons on the gamepad can be mapped to the **L4/R4/PL/PR buttons**.
- **L3/R3 buttons** are not supported.
- The **Home LED** will blink continuously when the mapped button is pressed.



Battery

Status

 Low battery
Battery charging
Fully charged



Power LED

Power LED blinks
Power LED stays solid
Power LED turns off

- Built-in 1000mAh battery pack, 20 hours of usage time and rechargeable with 4 hours charging time.
 - The gamepad will automatically shut down if it fails to connect within 1 minute of startup, or if there are no operations within 1 minute after establishing a connection.
 - The gamepad will not shut down during wired connection.
 - Charging and battery life depend on variations in settings or environmental factors, and actual results may vary.
-

Safety Warnings

- Please always use batteries, chargers, and accessories provided by the manufacturer.
 - The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approved accessories.
 - Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in serious injury.
 - Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these actions can be dangerous.
 - Any unauthorized changes or modifications to the device will void the manufacturer's warranty.
-

Ultimate Software

 
Please visit app.8bitdo.com to download the **Ultimate Software** to get the latest firmware & additional support.

 
Support

Please visit support.8bitdo.com for further information & additional support.

Pro 3 蓝牙手柄

中文

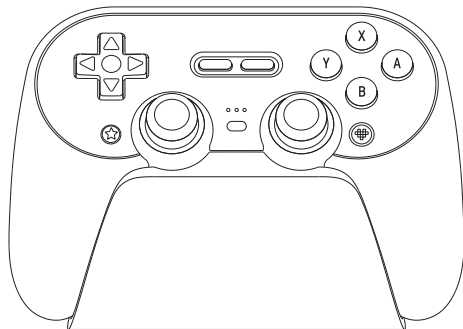

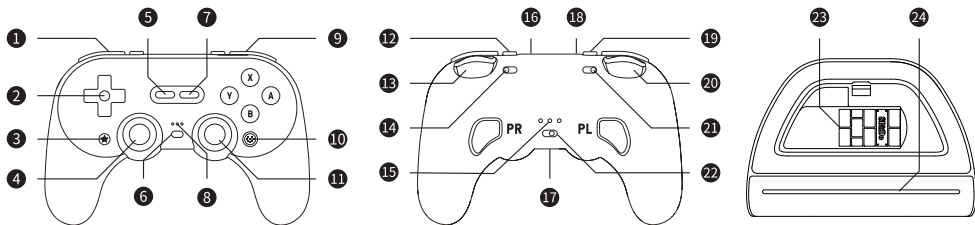

- * 开机:按下 **start** 键。
- * 关机:按住 **start** 键 3 秒。
- * 强制关机:按住 **start** 键 8 秒。

- | | | |
|----------------|------------|------------------|
| ① — L1 | ⑩ — Home 键 | ⑲ — L4 |
| ② — 方向键 | ⑪ — R3 | ⑳ — L2 |
| ③ — 星号键 | ⑫ — R4 | ㉑ — 扳机模式开关 |
| ④ — L3 | ⑬ — R2 | ㉒ — 模式开关 |
| ⑤ — - select 键 | ⑭ — 扳机模式开关 | ㉓ — 接收器 / 接收器收纳仓 |
| ⑥ — 配置键 | ⑮ — 充电触点 | ㉔ — 充电指示灯 |
| ⑦ — + start 键 | ⑯ — 电源指示灯 | |
| ⑧ — 配置指示灯 | ⑰ — 状态指示灯 | |
| ⑨ — R1 | ⑱ — 配对键 | |

Windows

* 要求 Windows 设备系统版本为 Windows 10 (1903) 或更高版本。

无线连接

1. 将 **模式开关** 移动到 **S/X** 位置。
2. 按下 **start** 键 开启手柄。
3. 将配备的 2.4G 接收器或装有 2.4G 接收器的底座连接到 Windows 设备的 USB 端口, 连接完成后 **状态指示灯** 常亮。

有线连接

1. 将 **模式开关** 移动到 **S/X** 位置。
2. 使用 USB 线将手柄连接到 Windows 设备的 USB 端口, 等待系统识别完成后即可使用。

Switch

- * 要求 Switch 主机系统版本为 3.0.0 或更高版本。
- * 不支持 NFC 扫描、红外摄像头、HD 振动、通知灯等功能。

蓝牙连接

1. 将 **模式开关** 移动到 **S** 位置。
2. 按下 **start** 键 开启手柄。
3. 按住 **配对键** 约 3 秒至 **状态指示灯** 左右滚动闪烁, 进入配对状态。(仅首次连接时需要配对)
4. 打开 Switch 主机“手柄”选项, 选择“更改握法 / 顺序”, 等待手柄连接; 连接完成后 **状态指示灯** 常亮。

无线连接

* 请确保“设置”-“手柄与感应器”-“Pro 手柄的有线连接”功能已开启。

1. 将 **模式开关** 移动到 **S/X** 位置。
2. 按下 **start** 键 开启手柄。
3. 将配备的 2.4G 接收器或装有 2.4G 接收器的底座连接到 Switch 主机的 USB 端口, 连接完成后 **状态指示灯** 常亮。

有线连接

* 请确保“设置”-“手柄与感应器”-“Pro 手柄的有线连接”功能已开启。

1. 将 **模式开关** 移动到 **S** 位置。
2. 使用 USB 线将手柄连接到 Switch 主机的 USB 端口, 等待系统识别完成后即可使用。

Android

* 要求 Android 设备系统版本为 9.0 或更高版本。

蓝牙连接

1. 将 **模式开关** 移动到 **D** 位置。
2. 按下 **start** 键 开启手柄。
3. 按住 **配对键** 约 3 秒至 **状态指示灯** 左右滚动闪烁, 进入配对状态。(仅首次连接时需要配对)
4. 打开 Android 设备“蓝牙”, 搜索 **8BitDo Pro 3** 手柄连接; 连接完成后 **状态指示灯** 常亮。

有线连接

* 需要设备支持 OTG 功能, 详情请咨询设备制造商。

1. 将 **模式开关** 移动到 **D** 位置。
2. 使用 USB 线将手柄连接到 Android 设备的 USB 端口, 等待系统识别完成后即可使用。

连发

- * 方向键、Home 键、左 / 右摇杆、L4 / R4 键、PL / PR 键 不支持连发。
- * 连发功能不会保存, 关机或断开连接后恢复默认。



配置 L4 / R4 / PL / PR 键

 
- * 可将手柄上的单个或多个按键复制到 L4 / R4 / PL / PR 键。
- * 左 / 右摇杆 不支持配置。
- * 已配置的按键使用时 Home 指示灯 会持续闪烁。



电源

电源状态

电量不足
正在充电
充电完成



电源指示灯状态

电源指示灯闪烁
电源指示灯常亮
电源指示灯熄灭

- * 配备 1000mAh 可充电式锂电池, 可持续使用约 20 小时, 充电时间约 4 小时。
 - * 开机后 1 分钟内未连接, 或连接后 15 分钟无操作会自动休眠。
 - * 使用有线连接时不会自动休眠。
 - * 充电和续航时间取决于设置或环境因素差异, 实际结果可能有所不同。
-

安全警示

- * 请使用制造商的电池、充电器、配件。
 - * 在用户使用第三方的配件时, 制造商不能对用户的安全负责。
 - * 请勿自行拆卸、改装或修理设备。
 - * 请勿挤压、拆解、刺穿或尝试改装设备及电池。
 - * 对设备的任意变动或改装, 将导致制造商对设备不予保修。
-

自定义配置

请访问 app.8bitdo.cn 获取 **精英软件** 使用。

技术支持

请访问 support.8bitdo.cn 了解详细信息。



Manual



使用说明

