 


8BitDo®

Instruction Manual

使用说明

 


 
 
Arcade Controller for Xbox 01

街机控制器 (Xbox) 07

Arcade Controller for Xbox

English

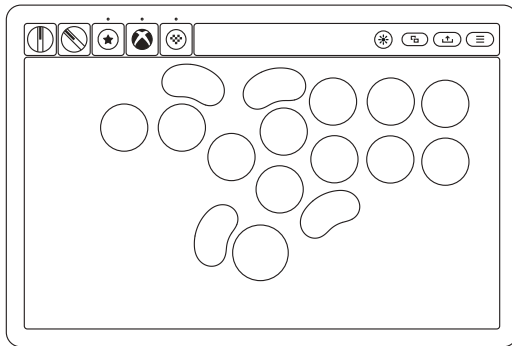

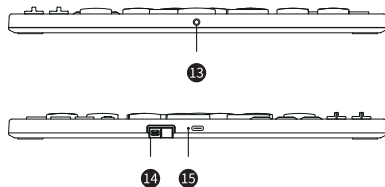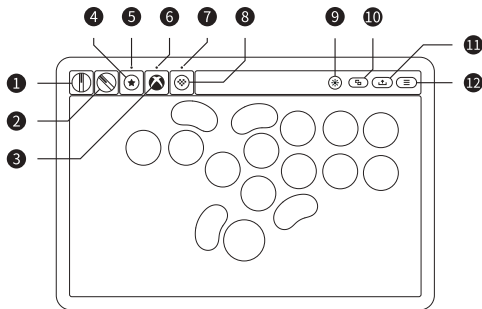

- Press the **Xbox button** to turn on the Arcade Controller.
- Hold the **Xbox button** for 6 seconds to turn off the Arcade Controller.
- Hold the **Xbox button** for 12 seconds to force the Arcade Controller.

❶ — Volume knob	❸ — Xbox button	❾ — RGB button
❷ — Tournament lock switch	❹ — Star button	❺ — Mapping LED
❸ — Xbox button	❻ — Status LED	❻ — Profile LED
❹ — Star button	❼ — Profile button	❼ — View button
❺ — Mapping LED	❽ — RGB button	❽ — Share button
❻ — Status LED	❿ — View button	❿ — Menu button
❼ — Profile button	⓫ — 3.5mm audio jack	⓫ — 2.4G Adapter / Adapter compartment
❽ — RGB button	⓬ — 2.4G Adapter / Adapter compartment	⓬ — Power LED
❿ — View button	⓭ — Power LED	

Xbox

- System Requirement: Ensure your Xbox console is updated to the latest system version.

Wireless Connection

1. Connect the adapter to the USB port of your Xbox device.
2. Press the **Xbox button** to turn on the Arcade Controller.
3. After the connection is complete, the **Status LEDs** on both the Arcade Controller and the adapter will remain solid.

Wired Connection

1. Connect the Arcade Controller to your Xbox console via the USB cable.
 2. Press the **Xbox button** to turn on the Arcade Controller, wait until the Arcade Controller is successfully recognized by the Xbox console.
-

Windows

- System requirement: Windows 10 (1903) or above.

Wireless Connection

1. Connect the adapter to the USB port of your Windows device.
2. Press the **Xbox button** to turn on the Arcade Controller.
3. After the connection is complete, the **Status LEDs** on both the Arcade Controller and the adapter will remain solid.

Wired Connection

1. Connect the Arcade Controller to your Windows device via the USB cable.
2. Press the **Xbox button** to turn on the Arcade Controller, wait until the Arcade Controller is successfully recognized by the Xbox console.

 
Tournament Lock Switch

- Turn the **Tournament lock switch** to **Lock** position, **Star button**, **Profile button**, **RGB button**, **Xbox button**, **View button**, **Menu button**, and **Share button** will be disabled, to prevent unintentional inputs from impacting game.






P1/P2 Buttons Configuration

- Single button on the Arcade Controller can be mapped to the P1/P2 buttons, multiple button configurations are not supported.
- **View button**, **Menu button**, **Share button**, and **Xbox button** are not supported for the button configuration.



Light

- The light will automatically turn off when the battery is low.
- Press the **RGB button** to cycle through the light effects: **Echo Press > Ripple > Breathing > Fixed > Flow > Off**.

Brightness Control:  +  / 

Color Options:  +  / 

Battery

Status

Low battery



Battery charging



Fully charged



Power LED

Red LED blinks

Green LED blinks

Green LED remains solid

- Built-in 3000mAh battery pack, the Arcade Controller can be used for approximately 10 hours with the light on and up to 40 hours with the light off, rechargeable with 4 hours charging time (5V-1A).
- The Arcade Controller will automatically shut down if it fails to connect within 1 minute of startup, or if there are no operations within 15 minutes after establishing a connection.
- The device will not automatically power off when connected to 3.5mm headphones for audio playback.
- The Arcade Controller will not shut down during wired connection.

Re-pair the Adapter

If the Arcade Controller is disconnected from the adapter or the adapter is replaced, you can re-pair it by following these steps:

1. When the Arcade Controller is powered off, press and hold the **Star button+Profile button+Xbox button** to turn on, and the **Status LED** will blink rapidly.
2. Connect the adapter to the USB port of your Xbox console or Windows device, wait for the Arcade Controller to automatically pair and connect with the adapter.
3. After the connection is complete, the **Status LEDs** on both the Arcade Controller and the adapter will remain solid.

Safety Warnings

- Please always use batteries, chargers, and accessories provided by the manufacturer.
- The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approved accessories.
- Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in serious injury.
- Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these actions can be dangerous.
- Any unauthorized changes or modifications to the device will void the manufacturer's warranty.
- This product contains small parts that may cause choking. Not suitable for children under three years old.
- This product features flashing lights. Individuals with epilepsy or photosensitivity should disable the lighting effects before use.
- Cables may cause tripping or entanglement hazards. Keep them away from walkways, children, and pets.
- Stop using this product immediately and seek medical attention if you experience dizziness, visual disturbances, or muscle spasms.

Ultimate Software

 
Please visit app.8bitdo.com to download the **Ultimate Software X** to get the customize button mapping function & additional support.

 
 
Support

Please visit support.8bitdo.com for further information & additional support.

街机控制器 (Xbox)

中文

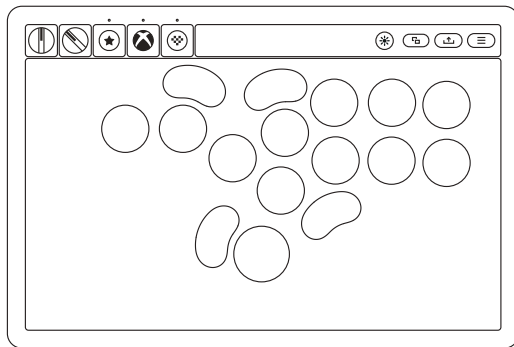

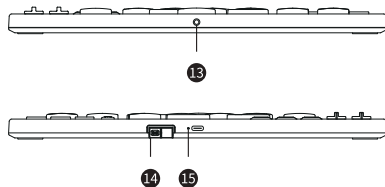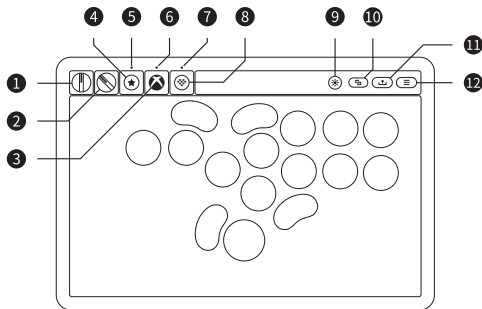

- * 开机:按下 **Xbox** 键。
- * 关机:按住 **Xbox** 键 6 秒。
- * 强制关机:按住 **Xbox** 键 12 秒。

- ① — 音量调节旋钮
- ② — 赛事锁定开关
- ③ — Xbox 键
- ④ — 星号键
- ⑤ — 热键指示灯

- ⑥ — 状态指示灯
- ⑦ — 配置指示灯
- ⑧ — 配置键
- ⑨ — 灯光键
- ⑩ — 视图键

- ⑪ — 分享键
- ⑫ — 菜单键
- ⑬ — 3.5mm 音频插孔
- ⑭ — 接收器 / 接收器仓
- ⑮ — 电源指示灯

Xbox

* 要求 Xbox 主机系统已更新到最新版本。

无线连接

1. 将接收器连接到 Xbox 主机的 USB 端口。
2. 按下 **Xbox 键** 开启街机控制器。
3. 连接完成后, 街机控制器与接收器 **状态指示灯** 均常亮。

有线连接

1. 使用 USB 线将街机控制器连接到 Xbox 主机的 USB 端口。
 2. 按下 **Xbox 键** 开启街机控制器, 等待系统识别完成后即可使用。
-

Windows

* 要求 Windows 设备系统版本为 Windows 10 (1903) 或更高版本。

无线连接

1. 将接收器连接到 Windows 设备的 USB 端口。
2. 按下 **Xbox 键** 开启街机控制器。
3. 连接完成后, 街机控制器与接收器 **状态指示灯** 均常亮。

有线连接

1. 使用 USB 线将街机控制器连接到 Windows 设备的 USB 端口。
2. 按下 **Xbox 键** 开启街机控制器，等待系统识别完成后即可使用。

赛事锁定开关

- * 将 **赛事锁定开关** 移动到 **锁定** 位置可禁止使用 **星号键、配置键、灯光键、Xbox 键、视图键、菜单键、分享键**，以防误操作影响赛事。



配置 P1 / P2 键

- * 可将街机控制器上的单个按键复制到 **P1 / P2 键**，不支持配置多个按键。
- * **视图键、菜单键、分享键、Xbox 键** 不支持配置。



灯光




- * 电量不足时会自动关闭灯光。
- * 按下 **灯光键** 可切换不同的灯光效果: **按键共鸣 > 波纹效果 > 呼吸效果 > 单色常亮 > 流水效果 > 关**

亮度调节:  +  / 

颜色调节:  +  / 

电源

电源状态

电量不足 
正在充电 
充电完成 

电源指示灯状态

红灯闪烁
绿灯闪烁
绿灯常亮

- * 配备 3000 mAh 可充电式锂电池, 开启灯光可持续使用约 10 小时, 关闭灯光可持续使用约 40 小时, 充电时间约 4 小时 (5V-1A)。
- * 开机后 1 分钟内未连接, 或连接后 15 分钟内无操作会自动关机。
- * 连接 3.5mm 耳机播放音频时不会自动关机。
- * 使用有线连接时不会自动关机。

重新配对接收器

若连接丢失或更换接收器，可使用以下方法重新配对接收器：

1. 街机控制器关机状态下，按住 **星号键 + 配置键 + Xbox 键** 开机，**状态指示灯** 快速闪烁。
2. 将接收器连接到 Xbox 主机或 Windows 设备的 USB 端口，等待街机控制器与接收器自动配对连接。
3. 连接完成后，街机控制器与接收器 **状态指示灯** 均常亮。

安全警示

- * 请使用制造商的电池、充电器、配件。
- * 在用户使用第三方的配件时，制造商不能对用户的安全负责。
- * 请勿自行拆卸、改装或修理设备。
- * 请勿挤压、拆解、刺穿或尝试改装设备及电池。
- * 对设备的任意变动或改装，将导致制造商对设备不予保修。
- * 产品包含小部件，可能造成窒息危险，不适合3岁以下儿童使用。
- * 本产品使用时包含闪烁灯光效果，若有癫痫病史或光敏性反应者使用时请关闭灯光。
- * 产品线缆可能造成绊倒或缠绕危险，请勿放置在行走区域，并远离儿童及宠物。
- * 如产品使用过程中出现头晕、视力异常、肌肉抽搐等症状，请立即停止使用并就医。

自定义配置

请访问 app.8bitdo.cn 获取 **精英软件 X**，可配置按键映射等功能。

技术支持

请访问 support.8bitdo.cn 了解详细信息。



Manual



使用说明

