 


- 1 - audio switch
 - headphones on
 - mic off
 - all off
- 2 - mode switch
 - joystick mode
 - gamepad mode
- 3 - view button
- 4 - share button
- 5 - menu button
- 6 - joystick
- 7 - joystick switch
 - Left joystick
 - D-Pad
 - Right joystick
- 8 - star button

- 9 - Xbox button
- 10 - status LED
- 11 - profile LED
- 12 - profile button
- 13 - power LED
- 14 - 2.4G receiver
- 15 - microphone mute LED
- 16 - 3.5mm audio jack

- Press the **Xbox button** to turn on the Arcade Stick
- Hold the **Xbox button** for 6 seconds to turn off the Arcade Stick
- Hold the **Xbox button** for 12 seconds to force the Arcade Stick off

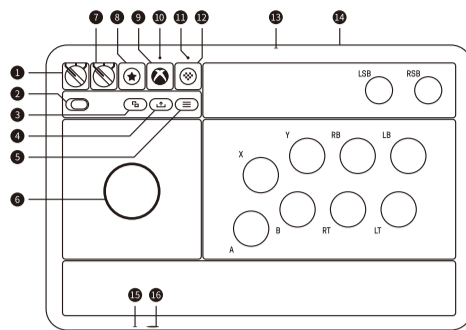

- 1 - 音频开关
 - 开启
 - 静音
 - 关闭
- 2 - 模式开关
 - 摇杆模式
 - 手柄模式
- 3 - 视图键
- 4 - 分享键
- 5 - 菜单键
- 6 - 摇杆
- 7 - 摇杆模式开关
 - 左摇杆
 - 方向键
 - 右摇杆
- 8 - 星号键

- 9 - Xbox 键
- 10 - 状态指示灯
- 11 - 配置指示灯
- 12 - 配置键
- 13 - 电源指示灯
- 14 - 2.4G 接收器
- 15 - 禁麦指示灯
- 16 - 3.5mm 音频口

- * 开机: 按下 **Xbox 键**。
- * 关机: 按住 **Xbox 键** 6 秒。
- * 强制关机: 按住 **Xbox 键** 12 秒。

Windows



- required system: Windows 10 (1903) or above

Wireless connection

1. connect the **2.4G receiver** to the USB port of your Windows device
2. turn the **mode switch to gamepad mode**
3. press **Xbox button** to turn on the Arcade Stick, wait till the Arcade Stick is successfully recognized by the device, **status LED** stays solid

Wired connection

1. turn the **mode switch to gamepad mode**
2. connect the Arcade Stick to your Windows device via USB cable, wait till the Arcade Stick is successfully recognized by the device, **status LED** stays solid

Xbox



- Xbox Series, Xbox One consoles are supported, Xbox 360 console is not supported
- The latest firmware version of your Xbox console is required

Wireless connection

1. connect the **2.4G receiver** to the USB port of your Xbox device
2. turn the **mode switch to gamepad mode**
3. press **Xbox button** to turn on the Arcade Stick, wait till the Arcade Stick is successfully recognized by the Xbox console, **status LED** stays solid

Wired connection

1. turn the **mode switch to gamepad mode**
2. connect the Arcade Stick to your Xbox console via USB cable, wait till the Arcade Stick is successfully recognized by the Xbox console, **status LED** stays solid

Windows



- * 要求 Windows 设备系统版本为 Windows 10 (1903) 或更高版本。

无线连接

1. 将配备的 **2.4G 接收器** 连接到 Windows 设备的 USB 端口。
2. 将 **模式开关** 拨到 **手柄模式** 位置。
3. 按下 **Xbox 键** 开机, 等待系统识别完成后, **状态指示灯** 常亮。

有线连接

1. 将 **模式开关** 拨到 **手柄模式** 位置。
2. 使用 **USB 线** 将摇杆连接到 Windows 设备的 USB 端口, 等待系统识别完成后, **状态指示灯** 常亮。

Xbox



- * 支持 Xbox Series 系列、Xbox One 系列机型, 不支持 Xbox 360 主机。
- * 要求 Xbox 主机系统版本更新到最新版本。

无线连接

1. 将配备的 **2.4G 接收器** 连接到 Xbox 主机的 USB 端口。
2. 将 **模式开关** 拨到 **手柄模式** 位置。
3. 按下 **Xbox 键** 开机, 等待系统识别完成后, **状态指示灯** 常亮。

有线连接

1. 将 **模式开关** 拨到 **手柄模式** 位置。
2. 使用 **USB 线** 将摇杆连接到 Xbox 主机的 USB 端口, 等待系统识别完成后, **状态指示灯** 常亮。

Button Swap

1. press and hold any of the two buttons you would like to swap, then press the **star button** to swap them
 2. press and hold any of the two buttons which have been swapped and press the **star button** to cancel it
- the **profile LED** will blink continuously when the swapped buttons are pressed
 - the swapped buttons will not be saved after the Arcade Stick is turned off
 - **Joystick, view/menu/share** and **Xbox buttons** are not supported

快速交换按键

 
- * 已交换过功能的按键, 按下时 **配置指示灯** 会持续闪烁。
- * 交换功能不会保存, 关机或断开后恢复默认。
- * **摇杆、视图键、菜单键、分享键、Xbox 键** 不支持交换。
- * 按住任意两个按键, 并按下 **星号键** 即可快速开启 / 取消交换按键功能。

Volume Control

- beeps when adjusted to maximum/middle value/minimum


1

- press and hold **profile + up/down** to turn up/down in-game volume

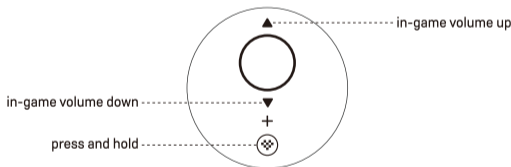

2

 - press and hold **profile + left/right** to adjust the balance between voice and game volume

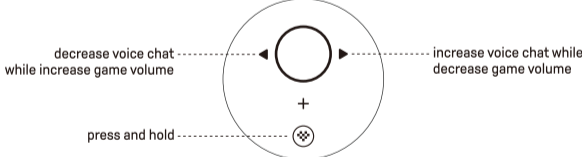


声音调节

- * 可通过组合键调整耳机的音量与声音平衡, 调整到最大 / 最小 / 中间值时会有提示音。


1

 - * 按住 **配置键 + 摇杆上、下** 可提高、降低主音量。

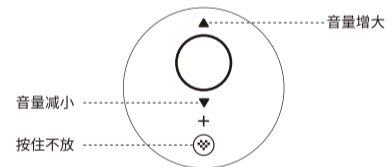

2

 - * 按住 **配置键 + 摇杆左、右** 可调节语音、游戏之间的音量平衡。

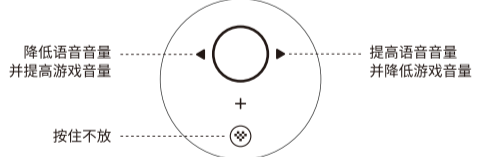

Battery



- | | | |
|-------------------------------|---|------------------------|
| Status LED indicator – | → | LED indicator – |
| low battery | → | red LED blinks |
| battery charging | → | green LED blinks |
| battery full charged | → | green LED stays solid |

- build-in 1000mAh Li-on rechargeable battery with 30 hours of play time (20 hours when connected with headphones) and with 4 hours charging time

电源



- | | | |
|-------------|---|----------------|
| 电量状态 | → | 电源指示灯状态 |
| 电量不足 | → | 红灯闪烁 |
| 正在充电 | → | 绿灯闪烁 |
| 充电完成 | → | 绿灯常亮 |

- * 配备 1000 mAh 可充电式锂电池, 可持续使用约 30 小时 (连接耳机使用约 20 小时), 充电时间约 4 小时。

Safety Warnings



- Please always use batteries, chargers, and accessories provided by the manufacturer.
- The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approved accessories.
- Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in serious injury.
- Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these actions can be dangerous.
- Any unauthorized changes or modifications to the device will void the manufacturer's warranty.

安全警示



- * 请使用制造商的电池、充电器、配件。
- * 在用户使用第三方的配件时, 制造商不能对用户的安全负责。
- * 请勿自行拆卸、改装或修理设备。
- * 请勿挤压、拆解、刺穿或尝试改装设备及电池。
- * 对设备的任意变动或改装, 将导致制造商对设备不予保修。

Ultimate Software

- press **profile button** to activate customised profiles. The profile LED will not light up when using the default setting
- It gives you elite control over every piece of your Arcade Stick: customize button mapping, adjust stick & trigger sensitivity, and vibration control. Please visit support.8bitdo.com for the application

自定义配置

- * 配置后可按下 **配置键** 可开启 / 关闭自定义配置, 默认无配置。
- * 请访问 app.8bitdo.cn 获取精英软件, 可对摇杆按键映射、摇杆方向等功能进行自定义配置。

Re-pair the Arcade Stick and Receiver

- follow the steps below to re-pair the Arcade Stick and receiver:
1. with the Arcade Stick off, press and hold the **star** and **profile** buttons, then press **Xbox button** to turn on the Arcade Stick, the **status LED** will blink rapidly
 2. plug the receiver into the USB port of your Windows device or Xbox console, wait for the Arcade Stick to pair with the receiver automatically
 3. the LEDs on both Arcade Stick and receiver will stay solid when the connection is successful

重新配对接收器

- 若连接丢失或更换接收器, 可使用以下方法重新配对接收器:
1. 街机摇杆关机状态下, 按住 **星号键 + 配置键 + Xbox 键** 开机, **状态指示灯** 快速闪烁。
 2. 将接收器连接到 Xbox 主机或 Windows 设备, 等待摇杆与接收器自动配对连接。
 3. 连接完成后, 街机摇杆与接收器 **状态指示灯** 均常亮。

Support

- Please visit support.8bitdo.com for further information & additional support

技术支持

- * 请访问 support.8bitdo.cn 了解详细信息。