



- A** – left button
- B** – right button
- C** – touch scroll
- D** – page up
- E** – backward
- F** – page down
- G** – forward

