8BitDo

- LSB
- view
- d-pad
- profile
- status LED
- LB
- menu
- share
- profile LED
- LT
- D-Pad Switch
- RSB
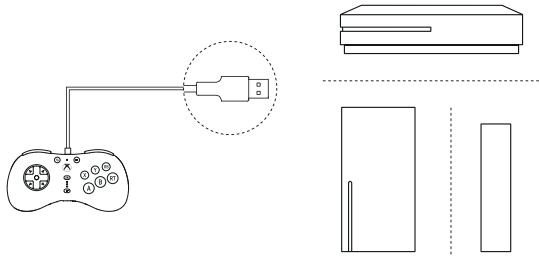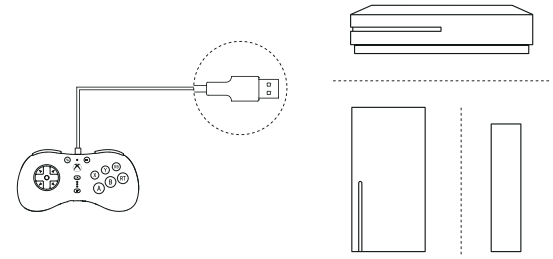- L/R Switch
- 3.5mm audio jack
- microphone mute switch

Xbox Series X|S or Xbox One

* The latest firmware version of your Xbox console is required.
Connect the controller to your Xbox console via its USB cable, and wait till the **status LED** becomes solid to play.
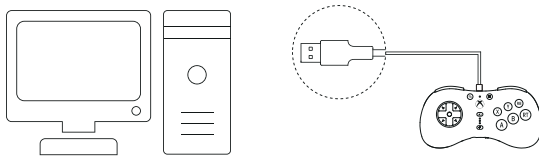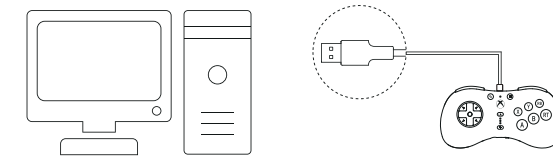

Windows 10 / Windows 11

* System requirement : Windows 10(1903) or above.
Connect the controller to your Windows device via its USB cable, and wait till the **status LED** becomes solid to play.
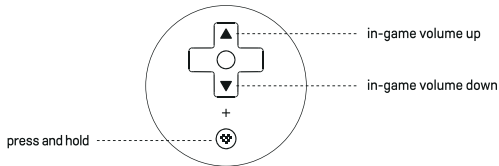

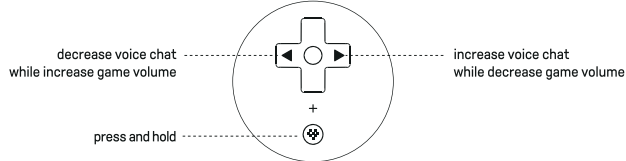## Volume Control

* Emits a beep when adjusted to maximum, middle, or minimum value.

* Press and hold **profile + up/down** to turn up/down in-game volume.

- in-game volume up
- in-game volume down
- press and hold

* Press and hold **profile + left/right** to adjust the balance between voice and game volume.

- decrease voice chat while increase game volume
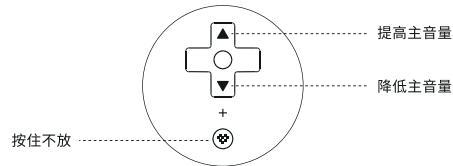- increase voice chat while decrease game volume
- press and hold

Safety Warnings ⚠

* Please always use batteries, chargers, and accessories provided by the manufacturer.
* The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approved accessories.
* Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in serious injury.
* Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these actions can be dangerous.
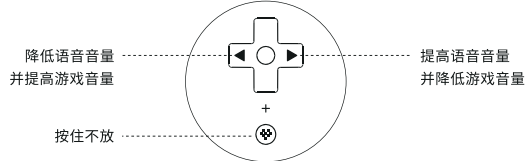* Any unauthorized changes or modifications to the device will void the manufacturer's warranty.

Ultimate Software

* Press the **profile** button to activate/deactivate the custom profile. The profile indicator will not light up when using the default setting.
* Please visit app.8bitdo.com for 8BitDo Ultimate Software X, which gives you elite control over every piece of your controller.

Support ❖

Please visit support.8bitdo.com for further information & additional support.

8BitDo

- LSB
- 视图键
- 方向键
- 配置键
- 状态指示灯
- LB
- 菜单键
- 分享键
- 配置指示灯
- LT
- 摇杆功能切换键
- RSB
- LR切换键
- 3.5mm 音频口
- 禁麦键

Xbox Series 系列 / Xbox One 系列主机

* 要求 Xbox 主机系统已更新到最新版本。
将手柄连接到 Xbox 主机的 USB 端口，**状态指示灯** 常亮后即可使用。

Windows 10 / Windows 11

* 要求 Windows 设备系统版本为 Windows 10（1903）或更高版本。
将手柄连接到 Windows 主机的 USB 端口，**状态指示灯** 常亮后即可使用。

声音调节

* 可通过组合键调整耳机的音量与声音平衡，调整到最大 / 最小 / 中间值时会有提示音。

1.按住 **配置键 + 方向键上、下**可提高、降低主音量。

- 提高主音量
- 降低主音量
- 按住不放

2.按住 **配置键 + 方向键左、右**可调节语音、游戏之间的音量平衡

- 降低语音音量并提高游戏音量
- 提高语音音量并降低游戏音量
- 按住不放

安全警示 ⚠

* 请使用制造商的电池、充电器、配件。
* 在用户使用第三方的配件时，制造商不能对用户的安全负责。
* 请勿自行拆卸、改装或修理设备。
* 请勿挤压、拆解、刺穿或尝试改装设备及电池。
* 对设备的任意变动或改装，将导致制造商对设备不予保修。

自定义配置

* 配置后按下 **配置键** 可开启 / 关闭 / 切换不同的配置，默认无配置。
请访问 app.8bitdo.cn 获取精英软件 X，可对手柄按键映射等功能进行自定义配置。

技术支持 ❖

* 请访问 support.8bitdo.cn 了解详细信息。